Instruction Manual
6” USB Fan
KSTFA060UAG

IMPORTANT INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

WARNING – To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

WARNING – To Reduce The Risk Of Electric Shock, Do Not Expose to Water or Rain.

WARNING – This is a fan – not a toy! To reduce the risk of personal injury and electric shock, it should not be played with or placed where small children can reach it.

1. Do unplug or disconnect the appliance from the power supply before servicing.
2. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning.
3. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. Do not use this product outdoors.
6. Do not use this product on wet surfaces.
7. Do not use this product in a bathtub or shower.
8. Do not use near furnaces, fireplaces, stove or other high-temperature heat sources.
9. Do not immerse this product in water or allow water to drip into the motor housing.

Know Your Fan

Parts and Features

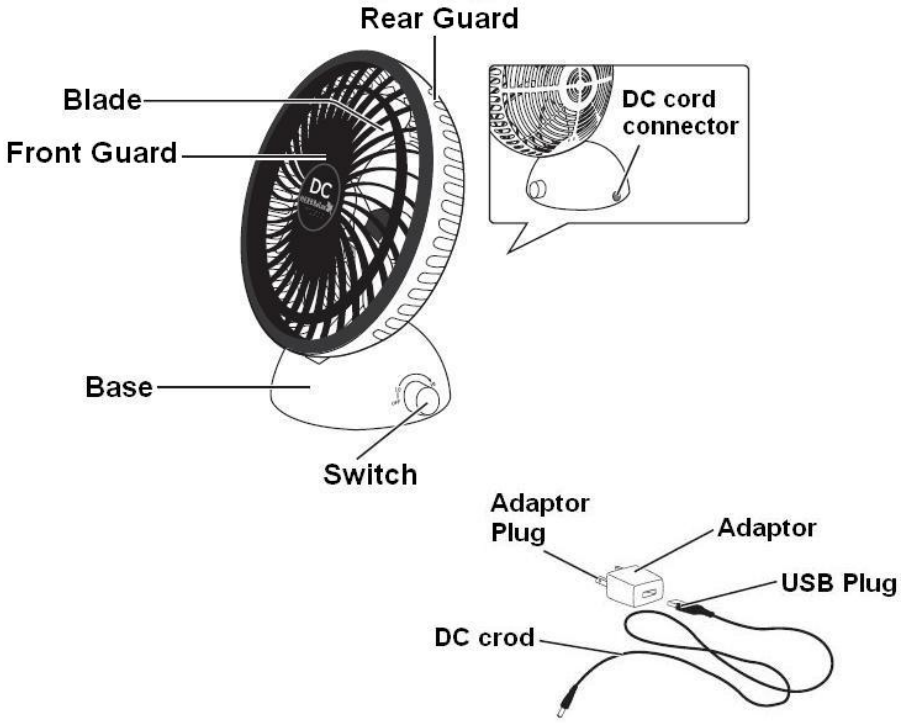

How to use

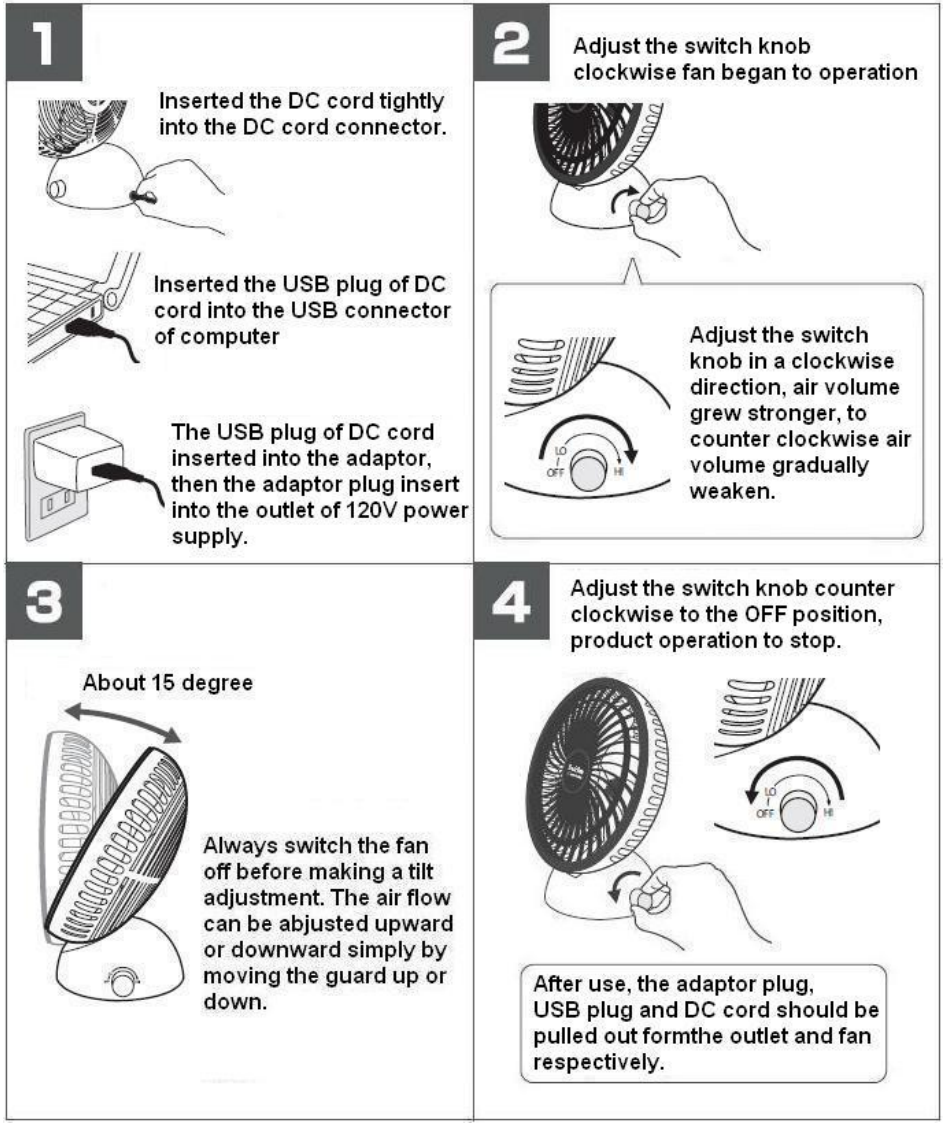
1
Inserted the DC cord tightly into the DC cord connector.
Inserted the USB plug of DC cord into the USB connector of computer
The USB plug of DC cord inserted into the adaptor, then the adaptor plug insert into the outlet of 120V power supply.
2
Adjust the switch knob clockwise fan began to operation
Adjust the switch knob in a clockwise direction, air volume grew stronger, to counter clockwise air volume gradually weaken.
3
About 15 degree
Always switch the fan off before making a tilt adjustment. The air flow can be abjusted upward or downward simply by moving the guard up or down.
4
Adjust the switch knob counter clockwise to the OFF position, product operation to stop.
After use, the adaptor plug, USB plug and DC cord should be pulled out formthe outlet and fan respectively.

Cleaning and Maintenance

- Use in a dry place, free of excessive humidity and water.
- Keep fan clean, wipe away dirt with a clean cloth.
- Use a vacuum cleaner to clean the front grid and blade. Do not use gasoline or thinner to clean fan.
- Before putting the fan in storage, clean thoroughly then cover with a vinyl bag and store in a dry place.

CAUTION:

- Do not use volatile solvents such as gasoline, thinner, benzene, wax, kerosene, alcohol, polishing powder, or alkaline detergent. These may discolour or damage the machine, causing injury.
- If using a chemical dust cloth, follow those instruction.
- Do not oil plastic. May cause discoloration or injury from damaged parts.
- When the fan is not facing front, do not force the fan to turn. Use the swivel function.
- Clean the fan and guard referrring to [How to Clean], then store it.

How to Remove Front Guard for Cleaning

1. Use tool to unlock the screw of the guard, turn counter clockwise remove the front guard.
2. After cleaning, turn clockwise to assemble the front guard, and use tool to lock the screw of the guard.